



Mini SBB Siren

Red	Positive +12 Volts constant supply
Black	Negative – constant earth supply. Connect to the vehicle chassis.
Green	Negative siren trigger
Yellow	Positive siren trigger
Blue	Spare wire (optional for use with bonnet switch)



Mini SBB Siren

Red	Positive +12 Volts constant supply
Black	Negative – constant earth supply. Connect to the vehicle chassis.
Green	Negative siren trigger
Yellow	Positive siren trigger
Blue	Spare wire (optional for use with bonnet switch)



Mini SBB Siren

Red	Positive +12 Volts constant supply
Black	Negative – constant earth supply. Connect to the vehicle chassis.
Green	Negative siren trigger
Yellow	Positive siren trigger
Blue	Spare wire (optional for use with bonnet switch)



Mini SBB Siren

Red	Positive +12 Volts constant supply
Black	Negative – constant earth supply. Connect to the vehicle chassis.
Green	Negative siren trigger
Yellow	Positive siren trigger
Blue	Spare wire (optional for use with bonnet switch)