

## REMOTE LEARNING INSTRUCTIONS FOR **GTTX**

---

**This procedure is using to some rhino products only.** ( Ask technician for support)

To add a new transmitter to your alarm, simply follow the procedure below.

1. Turn the vehicles ignition on
2. Immediately press and hold the LEFT button (button 1) on the original remote control until the siren starts to beep (approx. 4 seconds) and then release this the button.
3. Immediately press and hold the LEFT button (button 1) on the new remote control until beeping on siren is stopped.
4. Turn the vehicle's ignition off.
5. The new remote control is now programmed into the alarm.

## REMOTE LEARNING INSTRUCTIONS FOR **GTTX**

---

**This procedure is using to some rhino products only.** ( Ask technician for support)

To add a new transmitter to your alarm, simply follow the procedure below.

6. Turn the vehicles ignition on
7. Immediately press and hold the LEFT button (button 1) on the original remote control until the siren starts to beep (approx. 4 seconds) and then release this the button.
8. Immediately press and hold the LEFT button (button 1) on the new remote control until beeping on siren is stopped.
9. Turn the vehicle's ignition off.
10. The new remote control is now programmed into the alarm.